



РЕЖИМ

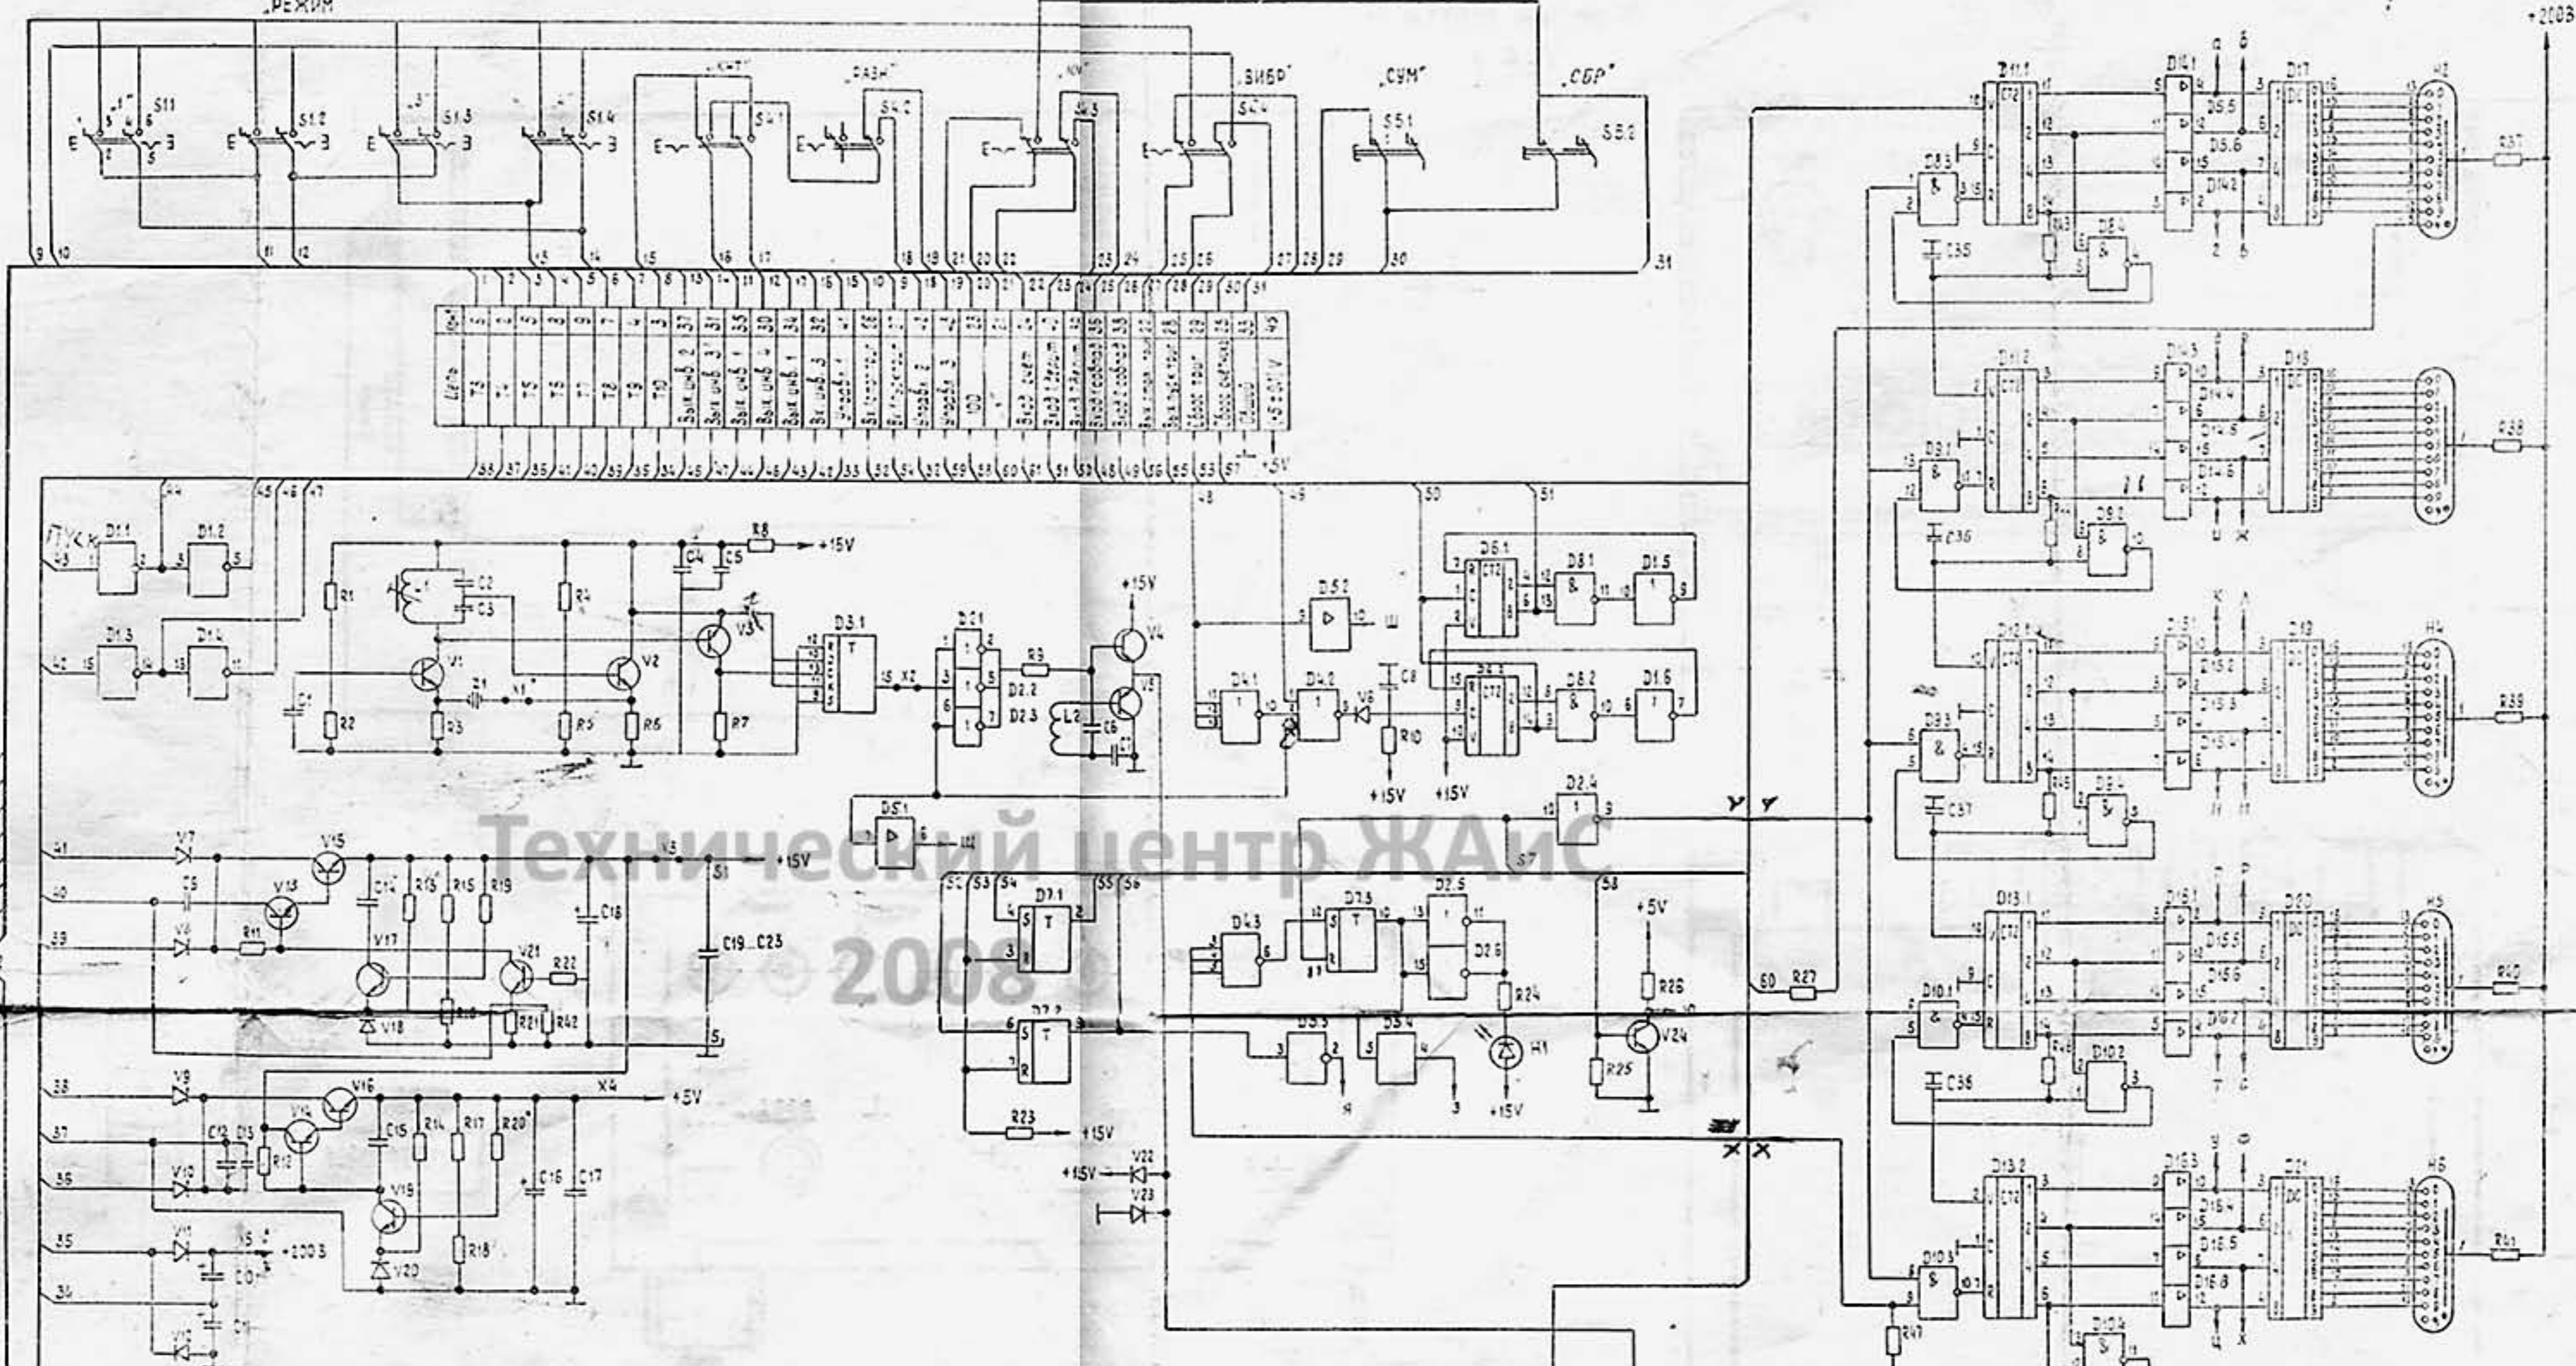

Цепь	Символ
72	3
73	4
75	5
76	6
77	7
78	8
79	9
70	10

Цепь	Символ
40	11
41	12
42	13
43	14
44	15
45	16
46	17
47	18
48	19
49	20
50	21
51	22
52	23
53	24
54	25
55	26
56	27
57	28
58	29
59	30
60	31
61	32
62	33
63	34
64	35
65	36
66	37
67	38
68	39
69	40
70	41
71	42
72	43
73	44
74	45
75	46
76	47
77	48
78	49
79	50
80	51

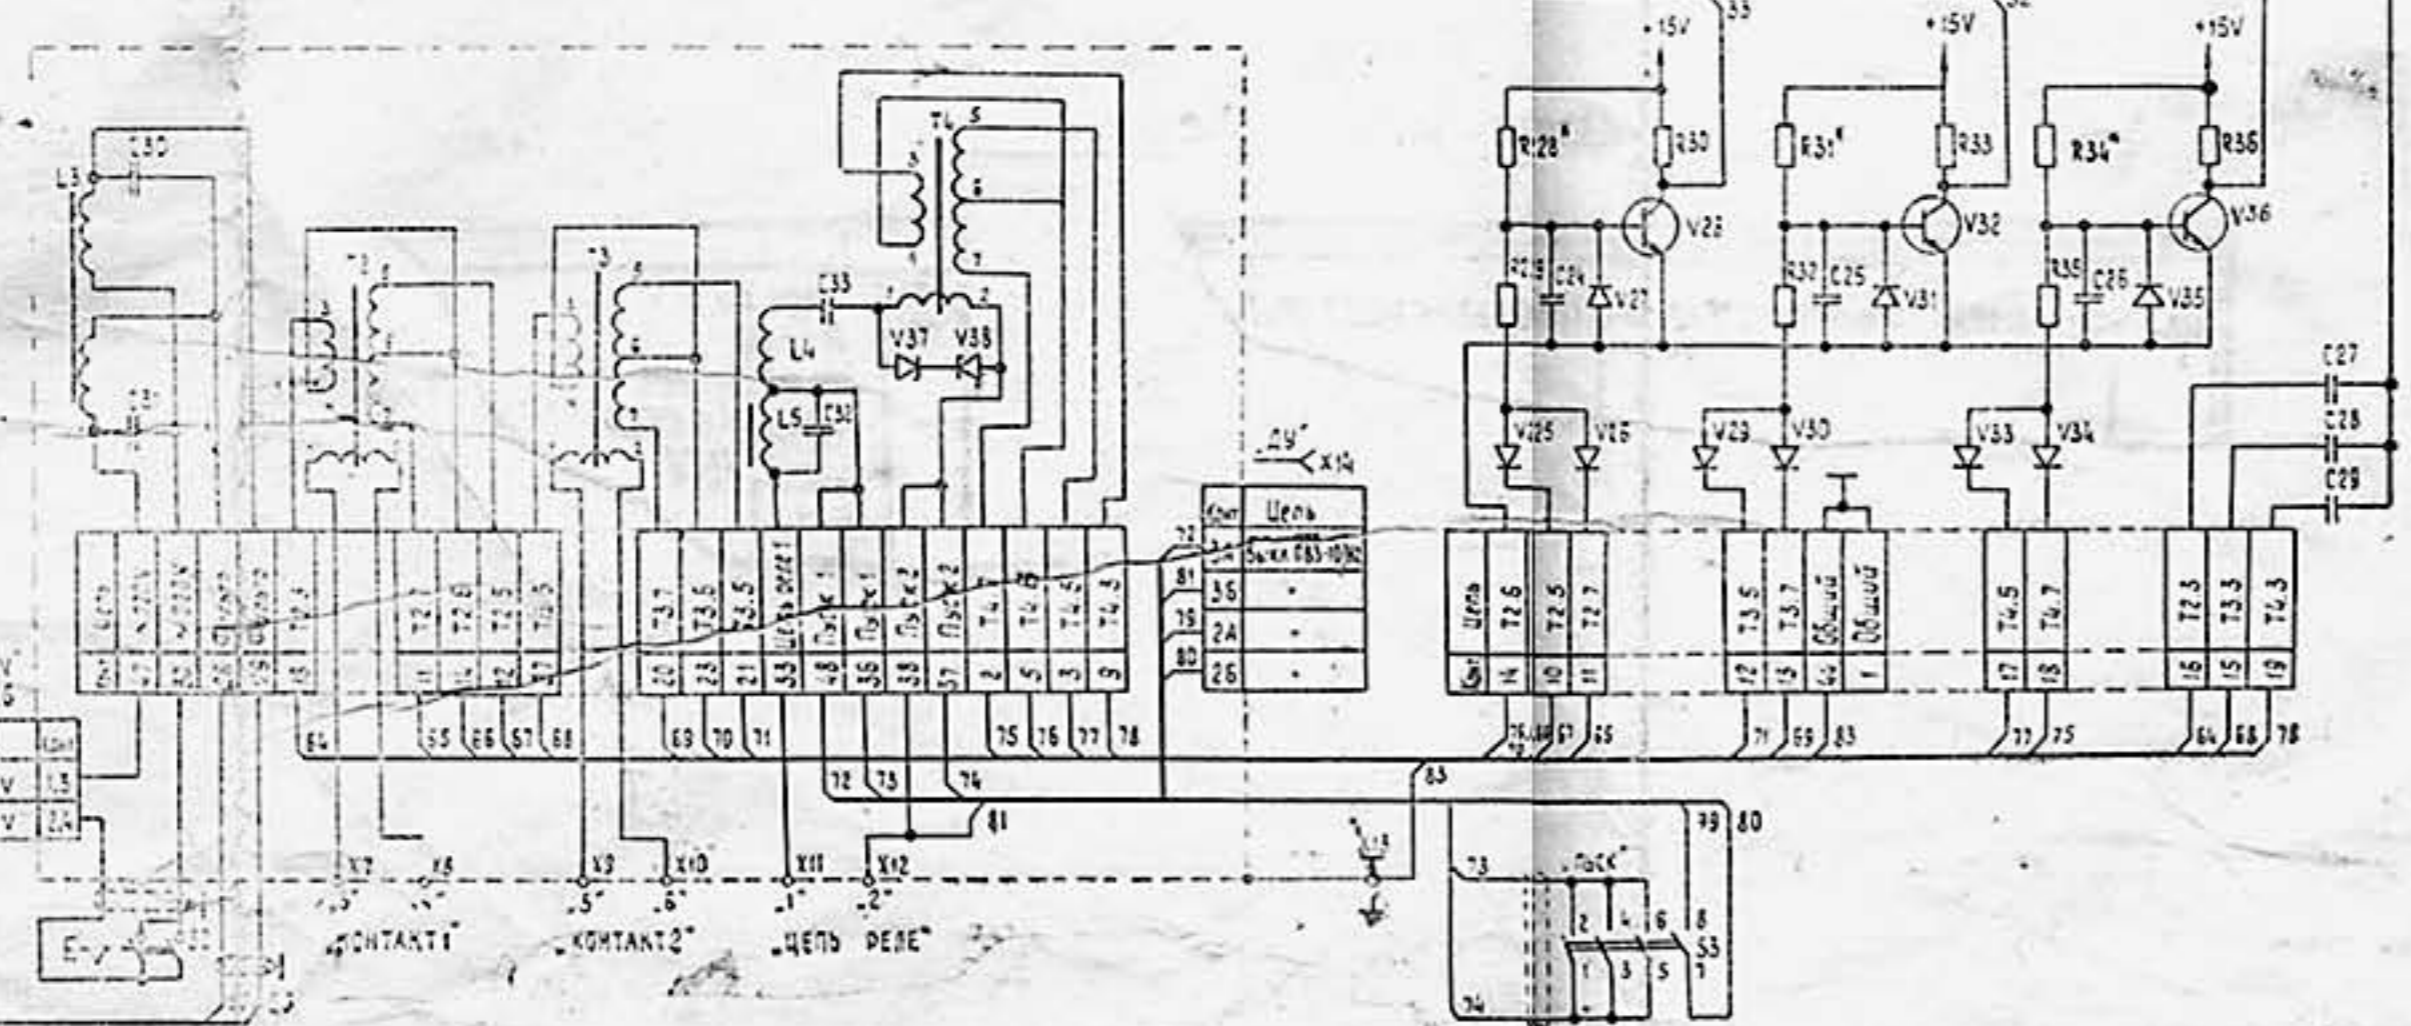

Цепь	Символ
72	3
73	4
75	5
76	6
77	7
78	8
79	9
70	10

Технический центр ЖАИС  
2008